

JKS-LINK-BI

Quick Installation Guideline

For more info, please download from <http://pvplusanz.jinkosolar.com>

Jinko Solar Co., Ltd
No.1, Jinko Road,
Shangrao Economic Development Zone Shangrao City,
Jiangxi Province, 334100, P.R. China


W:www.jinkosolar.com
BESS_AU@jinkosolar.com

Some advantages of installing the datalogger and keeping it online:

1. Real time monitoring
Get the health status of the PV plant;
Receive the regularly reminder like daily reports, monthly reports and other free services.
2. Intelligent Operation and Maintenance
Get the one-click diagnosis function to easy the troubleshooting;
Support the remote upgrade and parameters setting.

Step1. Unpacking


Unpack the box and take out JKS-LINK-BI BOX, JKS-LINK-BI and other accessories, list as following.

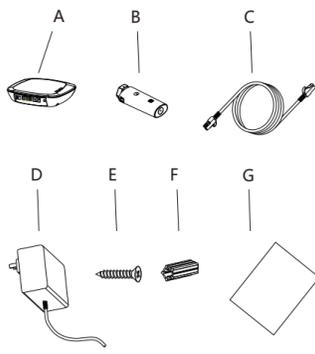

Item	Name	Quantity
A	JKS-LINK-BI BOX	1
B	JKS-LINK-BI	1
C	Network cable	1
D	Power adapter	1
E	Fixing screws	2
F	Wall plastic posts	2
G	User manual	1


Step2. Electrical Connection

1. Rotate the USB cover of the photovoltaic device counterclockwise.
2. Rotate the datalogger locker on the upper, make sure the triangle is on the front side and in the middle.
3. Connect the datalogger to the inverter USB port, make sure the triangle is on the front side, press the locker and rotate clockwise until it is tighten.

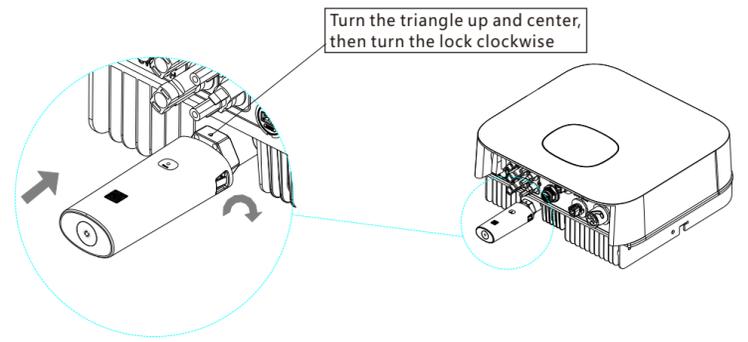

After the installation, if the LED light of JKS-LINK-BI flash quickly, it means installation works. If the LED light is off, please recheck the connection between JKS-LINK-BI and inverter.

 JKS-LINK BI BOX Electrical Connection



Item	Name	Description
A	Power input	Connect to the power adapter
B	RS 485	Reserved
C	RJ 45	Connect to the network
D	Key	Function key
E	Configuration LED	Configuration the device
F	Device LED	Device number connected
G	Network LED	Connecting the network
H	Power LED	Connecting the power

Connect JKS-LINK-BI BOX's RJ45 port to the router, then plug in JKS-LINK-BI BOX with power adaptor.
After initialization of JKS-LINK-BI BOX, the power LED is on, the network LED is on and the device LED flashing frequently. The power LED is on means it connected to power supply, the network LED is on means JKS-LINK-BI BOX connected to internet, the flashing of Device.

JKS-LINK-BI's LED Status	Status of The JKS-LINK-BI
Always On	The JKS-LINK-BI is initialing
Always Off	Loose connection
Flashing Quickly(every 0.2 second)	USB port find the inverter
Flasing Slowly(every 1 second)	Connection works

JKS-LINK-BI BOX LED Lights	Status of Working Condition
Power light	The light is on means power is on
Web light	Flashing means connect to router, on means connect to web
Device light	Time of frequently flashing means the number of device connect to JKS-LINK-BI BOX
Paired light	Flashing when pairing, go off if pairing successes

Step3. Use JKS-LINK-BI


Scan the QR code below to download "PV PLUS ANZ", also you can search "PV PLUS ANZ" in iOS or Google Play Store, download.

- Note: 1. The APP Make sure you download the latest version
2. For further information please visit: pvplusanz.jinkosolar.com





【Android & iOS】



2. After installed Jinko App, get into log in, click the register and then go to the page register.

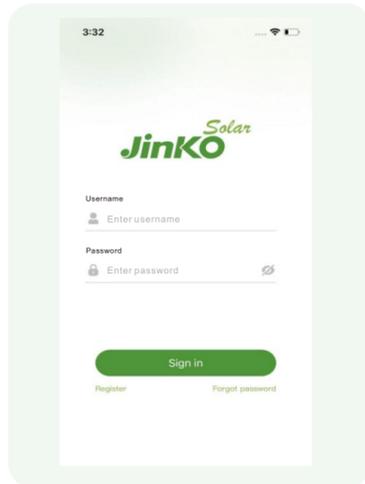




3. Select the country and city according to the actual address, and the wrong selection will result in incorrect time for uploading data. Fill in the user information, click "Register" after completing the registration, and automatically log to the "Power Station List" page after successful registration.
4. Click the "+" button to enter the "Add Power Station" page, enter the plant information, click below to confirm. After successful addition, it will automatically jump to the power station list page.

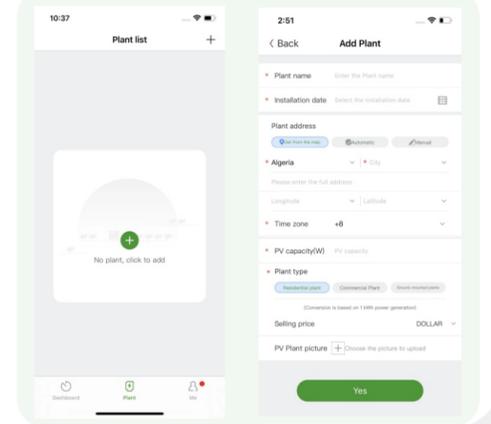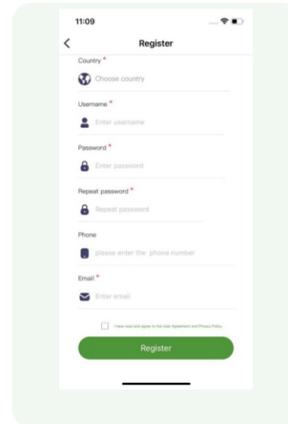


5. Click the equipment power station to enter the power station page on the power station list page, click the "+" in the upper right corner to add the collector operation.

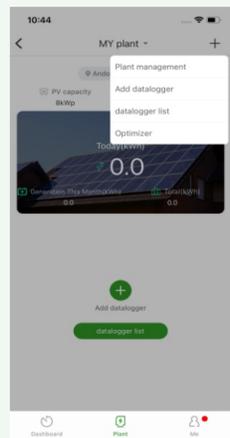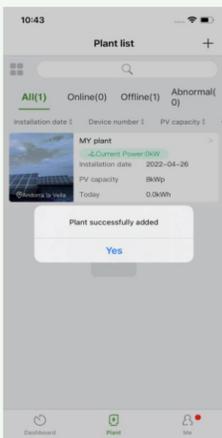

6. Click on the scan code on the Add Collector page, and add the collector by scanning the code to collect the barcode.)

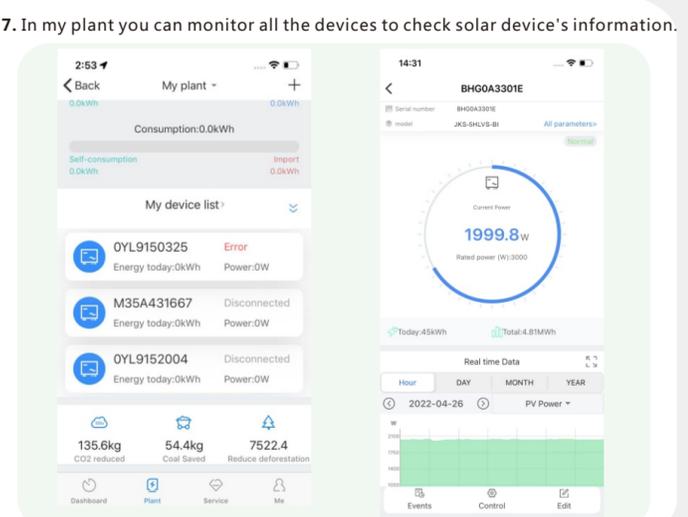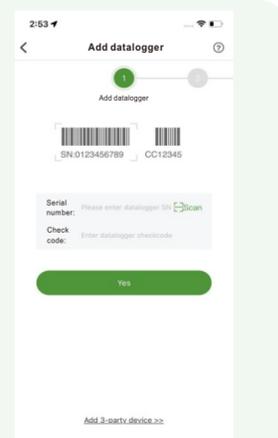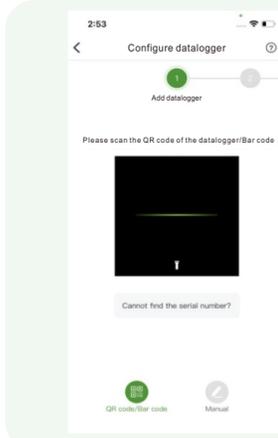

8. If you need to add, inspect or delete datalogger and plant, please click the "+" at the top right corner
Note: After you successfully add the datalogger you can see the JKS-LINK-BI BOX's conditions, if you can not find JKS-LINK-BI BOX please check the status of LED light to find out the trouble.

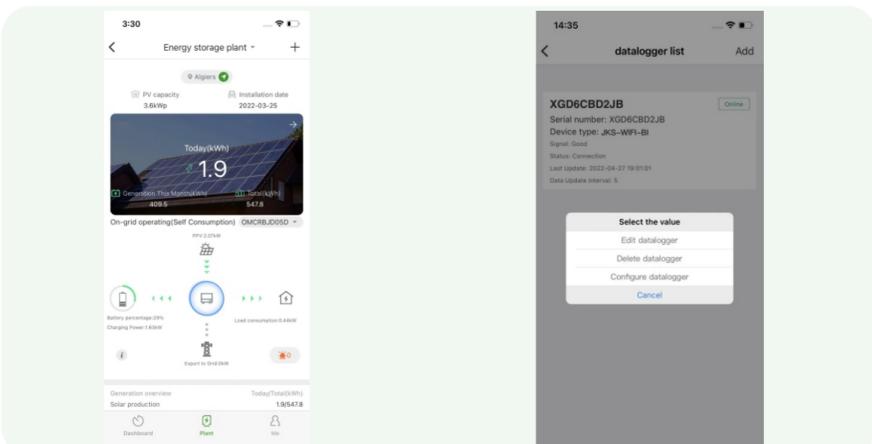

Tips1 Add New JKS-LINK-BI Device

Note: Only after resetting JKS-LINK-BI BOX or add new JKS-LINK-BI then you need pairing JKS-LINK-BI BOX and JKS-LINK-BI, all the devices will be paired when manufactured.
Quick press JKS-LINK-BI (in less than 2 seconds), then quickly press JKS-LINK-BI BOX's button, you can enter pairing mode, at this point JKS-LINK-BI BOX's pairing light is flashing, JKS-LINK-BI's Blue light flashing quickly, if pairing is successful, JKS-LINK-BI BOX's pairing light is off, JKS-LINK-BI Blue web light change to slow flashing. (the light is on for one second, and off for a second.)

Note: The longest connection distance between JKS-LINK-BI BOX and JKS-LINK-BI should be no more than 200 meters, if there is a wall between JKS-LINK-BI BOX and JKS-LINK-BI the longest connection distance is 50 meters, if there are two walls between JKS-LINK-BI BOX and JKS-LINK-BI the longest connection distance is 20 meters.

Tips2 Reset JKS-LINK-BI-BOX

- Purpose of resetting collector:
- (1) Erase all the pairing records
 - (2) JKS-LINK-BI BOX IP changes to Automatic

Steps of resetting collector:

Press JKS-LINK-BI BOX button for more than 6 seconds, until all the four LED lights are on, then release the button, at this time all the setting had been erased. After resetting need repairing JKS-LINK-BI BOX and JKS-LINK-BI, please refer to Tips1 above.